

# DON'T FORGET THE SEAL IN THE CAP OF THE FUEL TANK

- To prevent any leaks from the fuel tank, make sure that each cap is fitted with a seal (fig1);
- The seals have two different faces: black and grey (fig1);
- Put the seal in the cap (fig 2/3) black face downwards, grey face upwards in contact with the glass to ensure air tightness (fig 4);
- Without a seal, the fuel tank will not be waterproof ;
- Gently screw the cap on without using excess force, so that you do not break the glass.

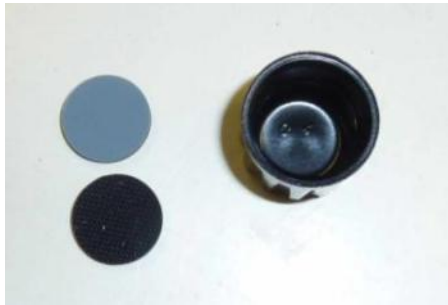


Fig 1

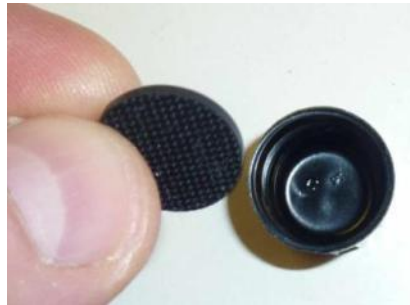


Fig 2



Fig 3



Fig 4